FITTING INSTRUCTIONS FOR SIDE HINGED GARAGE DOORS FITTING OF LOCK

FITTING INSTRUCTIONS

LOCK FITTING INSTRUCTIONS – OUTWARD OPENING

1. Your pair of side hinged garage doors has already been pre-drilled for a night latch at a position of 63mm from the edge of the door to the centre of the 32mm hole.
2. Discard the lock staple supplied with the lock.
3. Reverse the brass tongue in the lock body by firstly removing the mounting plate. Unscrew the crosshead screws from the face of the lock body.
4. Carefully remove the two dome crosshead screws from the lock mechanism retaining plate.
5. Withdraw the brass tongue into the body and carefully remove, turn over and replace.
6. Replace the mechanism plate ensuring the arrows are aligned.
7. Fix the lock to the door leaf as directed in the lock fitting instructions supplied with the lock. Ensure the cylinder connecting screws are not over-tightened as this may distort the panel surface.
8. Test the operation of the lock and adjust the sliding latch plate that is fixed to the other door leaf if necessary to give maximum engagement.

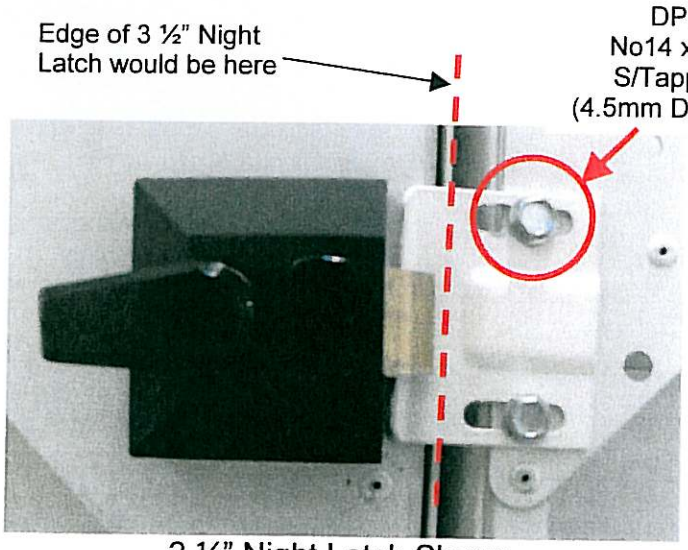

2 ½" Night Latch Shown

LOCK FITTING INSTRUCTIONS – INWARD OPENING

1. Your pair of side hinged garage doors has already been pre-drilled for a night latch at a position of 63mm from the edge of the door to the centre of the 32mm hole.
2. As no adjustments to the configuration of the lock are required, fix to the door in accordance with the instructions supplied with the lock.