


MK3 TRACKLESS FIXING INSTRUCTIONS




Europa, Gemini, Georgian, & Real Cedarwood Doors

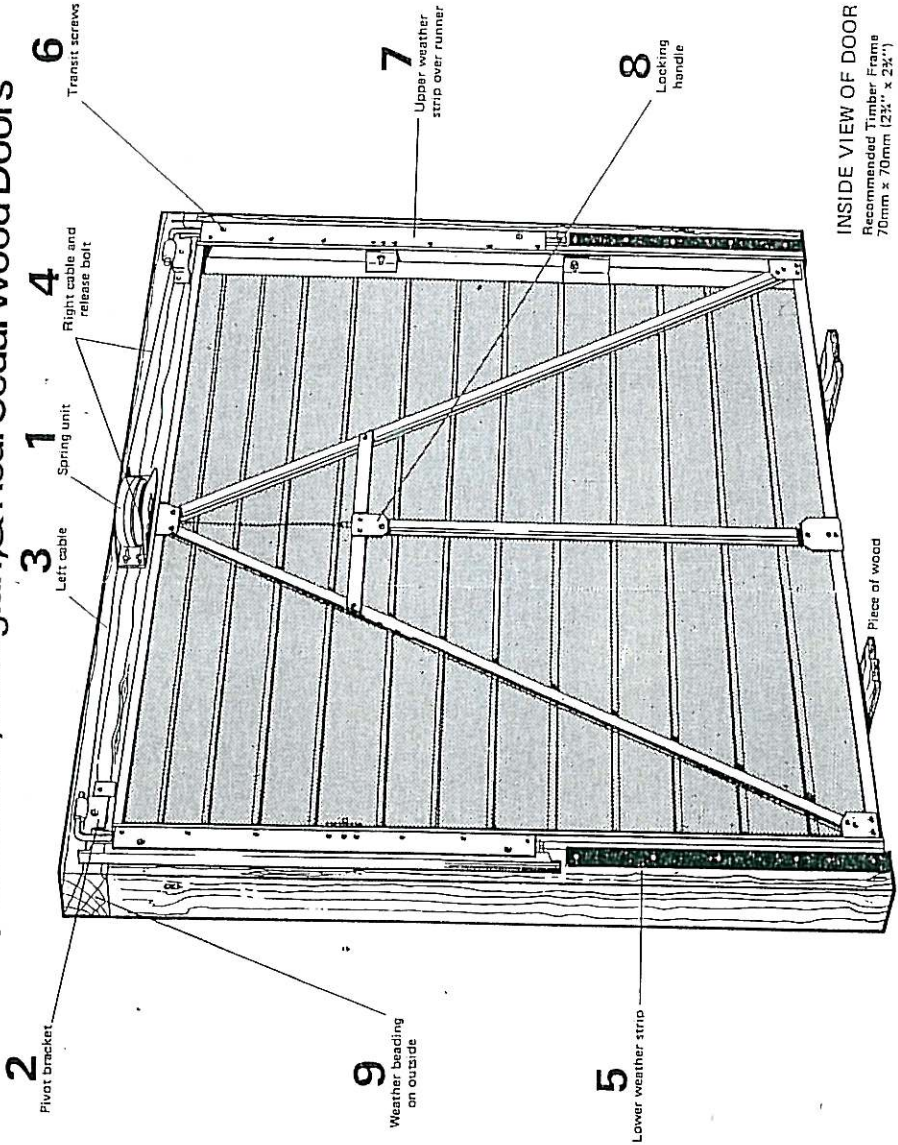

NOTES

a) It is *dangerous* to remove the release bolt from the powerful spring unit before completing operations nos 1-4.

b) Check squareness and dimension of the timber frame. The door is made smaller than timber opening sizes to allow clearance around the edges of the door.

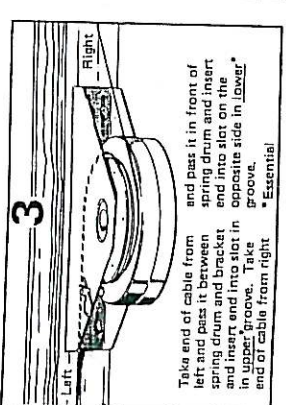
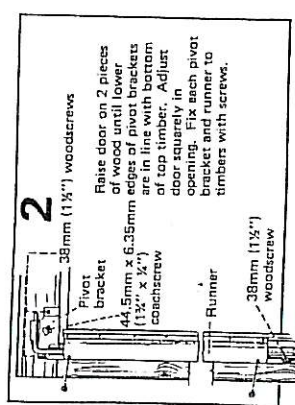
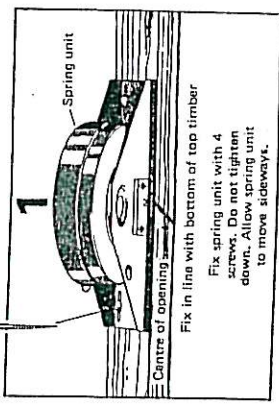


NOTES

c) *Minimum* acceptable headroom on back face of the top timber is 63mm (2 1/2"); recommended 70mm (2 3/4").

d) *Minimum* sideroom on back faces of side timber is 38mm (1 1/2"); recommended 70mm (2 3/4").

e) Back faces of side and head timbers must be in line and flush.

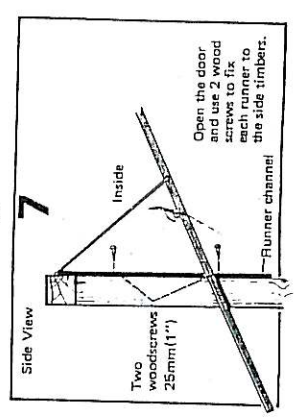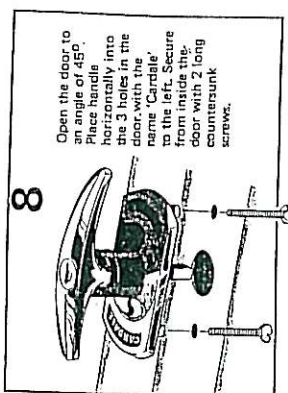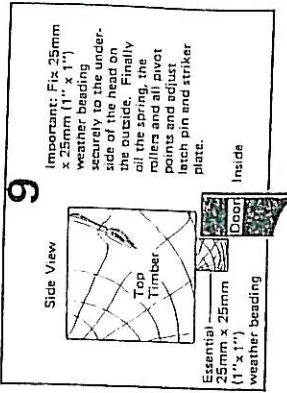

INSIDE VIEW OF DOOR

Recommended Timber Frame 70mm x 70mm (2 3/4" x 2 3/4")

